

ARDEX TLT™ Curbs

Installation Guide


STEP 1

If necessary, cut the ARDEX TLT™ Curb to length using a razor blade knife. Apply an ARDEX thin-set mortar to the floor and walls using a 1/4" x 3/8" square or U-notched trowel and then apply ARDEX TLT™ 700 to the edge of the ARDEX TLT™ Shower Base.

STEP 2

Press the curb firmly into place. Check the underside of the curb to ensure that full coverage and support is achieved.

Note: When setting tile on the curb, the surface must be sloped towards the shower drain.

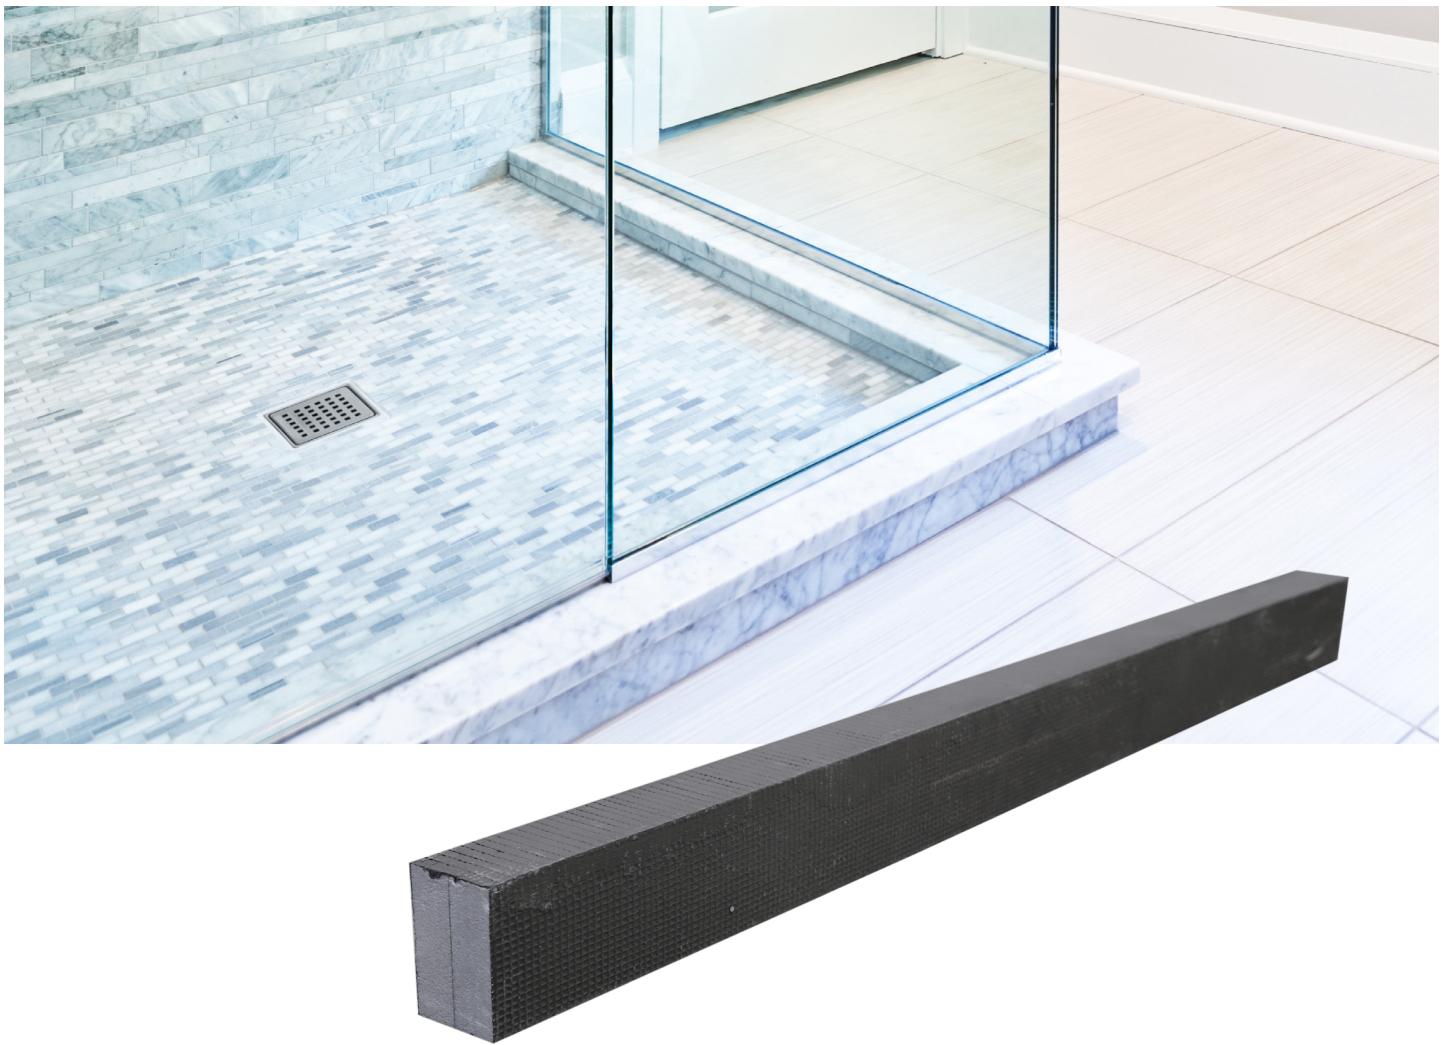

tile & stone
Installation Systems

www.ardexamericas.com

BUILT BY
YOU
backed by **ARDEX**