

# ARDEX TLT™ Shower Bases

## Installation Guide for 72" x 72" Shower Base

---

1. The ARDEX TLT™ Shower Base will be cut into 3 pieces:

- a. Center piece = 36" x 72"
- b. 2 "Wings"
  - i. Left Wing = 18" x 72"
  - ii. Right Wing = 18" x 72"


2. Follow normal installation instructions - install center piece first. Then, install one wing at a time.

For installation guidelines click the green button or visit the ARDEX TLT Shower Systems web page at [www.ardexamericas.com](http://www.ardexamericas.com)

3. Each wing will have a 3" flap of the ARDEX TLT™ 716 Waterproofing Membrane that will lay over top of the center piece to seal the two pieces together.

4. Use ARDEX 8+9™ or ARDEX X 5™ (or another ARDEX approved mortar) to seal the two wings to the center piece.

5. Continue with normal installation instructions.

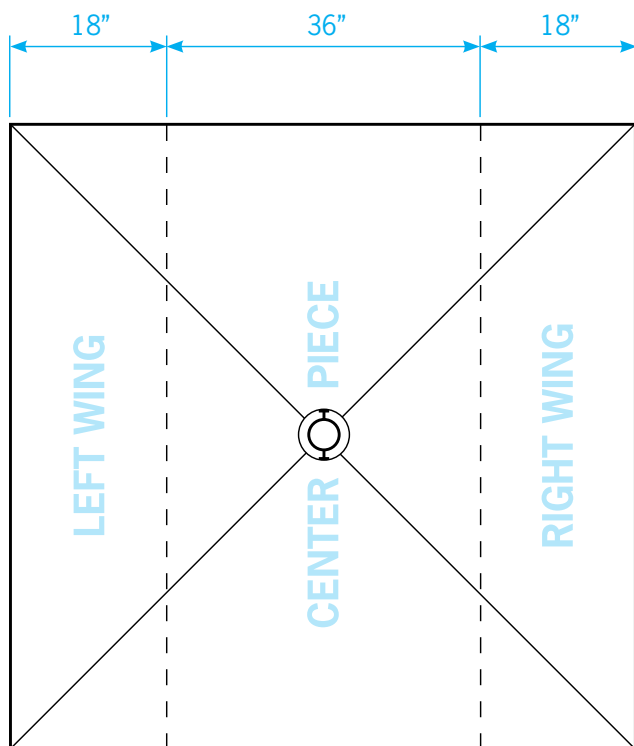

tile & stone  
Installation Systems

[www.ardexamericas.com](http://www.ardexamericas.com)

BUILT BY  
**YOU**  
backed by ARDEX